

## Horizontal Centrifugal Pumps With Magnetic Coupling TMR



### Operation & Maintenance Instructions

EN

02

Read these operation and maintenance instructions  
before start up!

To be held for future reference.

---

## Table of Contents

1. Safety risks .....	3
1.1 Installation and commissioning personnel .....	4
1.2 Operators and maintenance personnel .....	4
1.3 Repair personnel .....	4
1.4 Waste disposal .....	4
1.5 Improper use .....	5
2. Identification codes .....	5
3. General notes .....	5/6
3.1 Operation in hazardous location or pumping flammable liquids .....	7
4. Operating principle .....	8
5. Motor .....	9
6. Dry running survey .....	10
7. Instructions on installation and use .....	10
7.1 Transport .....	10
7.2 Installation .....	10/11
7.3 Start-up .....	12
7.4 Use .....	12
7.5 Shutdown .....	12
8. Maintenance .....	12
8.1 Dismantling .....	13
8.1.1 Dismantling of series TMR G2 .....	14
8.1.2 Dismantling of series TMR G3 .....	15-17
8.2 Inspection .....	17
8.3 Assembly .....	18
8.3.1 Assembly of series TMR G2 .....	18/19
8.3.2 Assembly of series TMR G3 .....	20/21
9. Repair .....	21
10. Operating faults and possible causes .....	22
11. Technical data .....	23
11.1 Series TMR G2 .....	23/24
11.2 Series TMR G3 .....	25/26
12. Dimensions .....	27-32
12.1 <b>Series TMR G2</b>	
IEC-Motors 50 Hz .....	27
IEC-Motors 60 Hz .....	28
NEMA-Motors 60 Hz .....	29
12.2 <b>Series TMR G3</b>	
IEC-Motors 50 Hz .....	30
IEC-Motors 60 Hz .....	31
NEMA-Motors 60 Hz .....	32
Appendix A .....	33
Declaration of Conformity .....	35

---

## 1. Safety risks



### **Warning! Magnetic fields**

Magnetic pumps contain some of the most powerful magnets in existence. The magnets are positioned on the back of the impeller and the outer magnet housing. The magnetic fields may adversely affect persons fitted with electronic devices (e.g. pacemakers and defibrillators): such persons must not be allowed to handle magnetic pumps and magnetic pump components.



### **Warning! Magnetic force**

Exercise extreme caution and follow instructions carefully during pump assembly/dismantling. Magnetic force attract (cause insertion of) internal and magnetic units, and are therefore a potential source of injury to fingers and hands.



### **Warning! Chemical hazard!**

The pumps are designed to pump different types of liquid and chemical. Follow the specific instructions to decontaminate during inspection or maintenance.



### **Warning!**

Safety risks for personnel mainly arise from improper use or accidental damages. These risks may be of an electrical nature as far as the non-synchronous motor is concerned and may cause injury to hands if working on an open pump. Risks may also arise due to the nature of the liquids pumped. It is therefore of utmost importance to closely follow all the instructions contained in this manual so as to eliminate the causes that may lead to pump failure and the consequent leakage of liquid dangerous for both personnel and the environment.

Risks may also arise from improper maintenance or dismantling practices.

In any case five general rules are important:

- A) all services must be carried out by specialised personnel or supervised by qualified personnel depending on the type of maintenance required
- B) install protection guards against eventual liquid sprays (when the pump is not installed in remote areas) due to an accidental pipe rupture. Arrange for safety basins to collect possible leakage.
- C) when working on the pump always wear acid-proof protective clothing
- D) arrange for proper conditions for suction and discharge valve closing during disassembly
- E) make sure that the motor is completely disconnected during disassembly

Proper design and building of the plants, with well positioned and well marked piping fitted with shut-off valves, adequate passages and work areas for maintenance and inspections are extremely important (since the pressure developed by the pump could give some kind of damage to the plant in case this one should be faulty made or wear and tear-damaged).

It must be stressed that the major cause of pump failures leading to a consequent need to intervene is due to the pump running dry in manually operated plants. This is generally due to:

- the suction valve being closed at start-up or
- the suction tank being emptied without stopping

---

## 1.1 Installation and commissioning personnel

Interventions allowed only to specialised personnel who may eventually delegate to others some operations depending on specific evaluations (technical capability required: specialisation in industrial plumbing or electric systems as needed).

## 1.2 Operators and maintenance personnel

Interventions allowed to general operators (after training on the correct use of the plant):

- pump starting and stopping
- opening and closing of valves with the pump at rest
- emptying and washing of the pump body via special valves and piping
- cleaning of filtering elements

Interventions by qualified personnel (technical capacities required: general knowledge of the mechanical, electrical and chemical features of the plant being fed by the pump and of the pump itself):

- verification of environmental conditions
- verification of the condition of the liquid being pumped
- inspections of the control/stop devices of the pump
- inspections of the rotating parts of the pump
- trouble shooting

## 1.3 Repair personnel

Interventions allowed to general operators under the supervision of qualified personnel:

- stopping of the pump
- closing of the valve
- emptying of pump body
- disconnection of piping from fittings
- removal of anchoring bolts
- washing with water or suitable solvent as needed
- transport (after removal of electrical connections by qualified personnel)

Interventions by qualified personnel (technical capacities required: general knowledge of machining operations, awareness of possible damage to parts due to abrasion or shocks during handling, know-how of required bolt and screw tightening required on different materials such as plastics and metals, use of precision measuring instruments):

- opening and closing of the pump body
- removal and replacement of rotating parts

## 1.4 Waste disposal

Materials: separate plastic from metal parts. Dispose of by authorized companies.

---

## 1.5 Improper use

The pump must not be used for purposes other than the transfer of liquids.

The pump cannot be used to generate isostatic or counter pressures.

The pump cannot be used to mix liquids generating an exothermal reaction.

The pump must be installed horizontally on a firm base.

The pump must be installed on a suitable hydraulic plant with inlet and outlet connections to proper suction and discharge pipes.


The plant must be able to shut off the liquid flow independently from the pump.

Handling of aggressive liquids requires specific technical knowledge.

## 2. Identification codes

Each pump is supplied with the serial and model abbreviation and the serial number on the type label, which is riveted onto the support side. Check these data upon receiving the goods. Any discrepancy between the order and the delivery must be communicated immediately.

**In order to be able to trace data and information, the abbreviation, model and serial number of the pump must be quoted in all correspondence.**

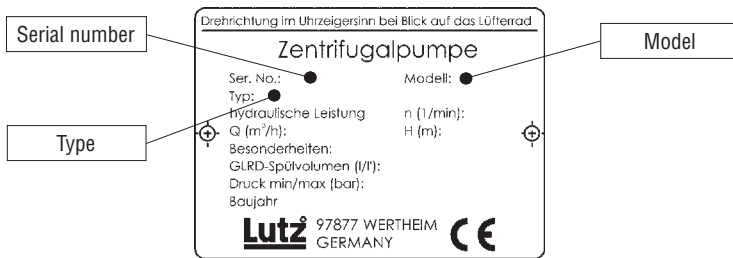

## 3. General notes

"TMR" pumps are designed and built for the transfer of liquid chemical products having a specific weight, viscosity, temperature and stability of state appropriate for use with centrifugal pumps in a fixed installation, from a tank at a lower level to a tank or a pipe to a higher level. The characteristics of the liquid (pressure, temperature, chemical reactivity, specific weight, viscosity, vapour tension) and the ambient atmosphere must be compatible with the characteristics of the pump and are defined upon ordering.

The max. pump's performances (capacity, head, rpm) are defined on the identification plate.

"TMR" pumps are centrifugal, horizontal, single stage, coupled to a non-synchronous electric motor via a magnetic coupling, with axial inlet and radial outlet for connection to the hydraulic system. They are foot-mounted for floor fixing.

"TMR" pumps are not self priming.

R1 or R2 execution "TMR" pumps can run dry.

The liquid to be pumped must be clean for the R1, R2, N1 or N2 execution, the X1 or X2 execution may contain solid (% , dimension and solid part hardness must be agreed during the offer).

Clockwise rotation seen from the motor side.

---

Make sure that the chemical and physical characteristics of the liquid have been carefully evaluated for pump suitability.

The specific weight that can be pumped at 25°C (liquid and environment) referred to max. flow (50 or 50 Hz) depend upon the type of construction:

Standard construction N *	1.05 kg/dm <sup>3</sup>
Powered construction P *	1.35 kg/dm <sup>3</sup>
Strong-powered construction S *	1.80 kg/dm <sup>3</sup>

\*) stamped on the rating plate

The specific weight that can be pumped at 70°C is 10% less than that at 25°C.

The level of kinematic viscosity must not exceed 30 cSt so as not to significantly modify the pump's performance. Higher values up to a maximum of 100 cSt are possible provided that the pump is equipped with suitable impeller to be defined upon ordering.

The maximum continuous working temperature referred to water as well as the admissible ambient temperature depend on the choice of materials (specified on the identification plate):

Execution	WR	GF	GX
Operating temperature	-5 up to +80°C	-30 up to +110°C	-30 up to +110°C
Ambient temperature	0 up to +40°C	-20 up to +40°C	-20 up to +40°C

The maximum pressure the pump may be subjected to is 1.5 times the head value developed with the outlet closed.

The vapour pressure value of the liquid to be pumped must exceed (by at least 1m wc) the difference between the absolute total head (suction side pressure added to the positive suction head, or subtracted by the suction lift) and the pressure drops in the suction side piping (including the inlet NPSHr drops shown on the specific tables).

The pump does not include any non return valve nor any liquid flow control or motor stop device.

---

### 3.1 Operation in hazardous location or pumping flammable liquids



#### **Danger!**


Operation in hazardous location or pumping flammable liquids can cause explosion resulting in severe injury or death. Use for this application only pumps of version GX with the identification II 2G T4. The identification for Ex-protection on the pump only refers to the hydraulic parts. Following must be observed:

- During operation of the pump the internal space must be permanently filled with liquid to prevent that an explosive atmosphere can arise. For the start up after the filling make sure that the pumps starts to deliver right now after the starting process and that the gas which is still remaining in the internal space is exhausted. Provide respective control equipment in case this cannot be guaranteed.
- Observe the limits for operating and ambient temperature.
- Check the chemical compatibility of the liquid being pumped with the sealing components of the pump in order to prevent an emission of explosive gases.
- Use an inlet filter. The liquid being pumped may contain max. 5% of particles. These particles are not allowed to be solid, adhesive, abrasive or of greater size than 0.1 mm. Only a small amount of particles up to a size of 0.5 mm is allowed.
- Provide an equipotential bonding at the pump. Connect the equipotential bonding cable onto the earthing terminal outside of the motor housing.
- The pump is not allowed to run dry. This must be secured by using a level control, a flow control or a pressure switch.
- Use instruments for controlling the leakage. In case of leakage stop the pump. Observe leakage at the subsurface of the pump.
- Do not operate the pump at the capacity limits of the performance curve.
- Do not operate the pump with closed gate valves in suction and/or pressure line.
- The pump may not be exposed to water hammer.
- The pressure at the inlet or discharge side of the pump may not exceed the 1.5-fold value of that the pump creates with a closed outlet.
- Before start up check the rotating direction of the pump in order to prevent that temperature exceeds due to dry running. Check the rotating direction when the hydraulic parts are disconnected, if no liquid is available.
- Observe the instructions for maintenance, dismantling and assembly.
- When reassembling the pump always change O-rings, V-rings and seal-rings.

---

#### 4. Operating principle

HYDRAULICALLY alike to all centrifugal pumps, it is equipped with a blade-type impeller rotating within a fixed housing. It has a tangential outlet (or radial with an internal deflector) and, by creating a depression in the center, it allows the liquid to flow from the central suction side. Then, flowing through the impeller's blades, the fluid acquires energy and is conveyed towards the outlet.

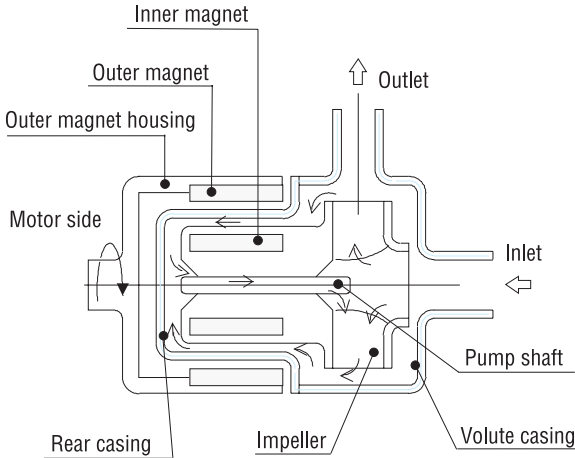

MECHANICALLY different from the traditional centrifugal pumps in the impeller motion drive thanks to the magnetic field created between the primary outer magnet and the inner magnet (not visible because housed inside the impeller hub). The magnetic field crosses the plastic parts and the liquid, and firmly couples the two magnet assemblies. When the motor causes the outer magnet to rotate together with its housing, the inner magnet assembly is dragged at the same speed. As a result the impeller, which is integral to it, is maintained in rotation.

The SHAFT, totally within the housing, is not involved in the transmission of rotary motion; its only function is to act as a centering guide and support for the impeller. To this end the components are designed so that a spontaneous cooling circuit (due to a simple effect of pressure) is established to cool the surfaces subject to friction. Periodic inspections prevent the build-up of sediments between the shafts and the guide bushes significantly lengthening their working life.




## 5. Motor
 
### Electrical connections

The electrical connection to the motor terminal determines the direction of rotation of the motor and can be verified by looking at the cooling fan at the rear of the motor (for the TMR pump this has to rotate clockwise looking at the front end).


With single phase motors the direction of rotation may be reversed by changing the position of the connection plates:




With three-phase motors the direction of rotation may be changed by swapping any two of the three conductors independently of the type of connection to the windings:



The windings of three-phase motors ( e.g. with (a) 230-400 V; (b) 400-600 V) require a delta-connection for lower voltage ( 230 volts for a ; 400 volts for b).

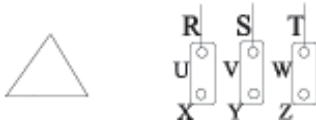

They require a star-connection for higher voltage (400 volts for a; 690 volts for b).

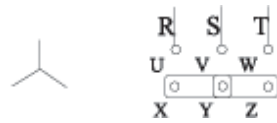

Star/Delta starting is used when the motor power is above 7.5 kW (10 HP ) only in case of frequent starts and short running times, but always when the motor power is above 15kW (20 HP ). All this is also to safeguard the structure of the pump.

### Protection level

The initials IP are followed by two numbers:

The first number indicates the level of protection against penetration of solid objects and in particular:

- 4** for solids whose dimension is greater than 1mm
- 5** for dust (eventual internal deposits will not harm operation)
- 6** for dust (no penetration)

The second number indicates the protection against the penetration of liquids. In particular:

- 4** for water sprays from all directions
- 5** for jets of water from all directions
- 6** for tidal and sea waves

According to the IP protection indicated on the identification plate of the motor and to the environmental conditions, arrange for opportune extra protections allowing in any case correct ventilation and rapid drainage of rainwater.

---

## 6. Dry running survey

Though the pump can occasionally run dry (execution R1-R2), it is therefore suitable to safeguard the pump and the plant to use:

- pressure switch;
- level control of the container being emptied;
- flow meter;
- control devices for the motor power absorption.

## 7. Instructions on installation and use


### 7.1 Transport

- cover the hydraulic connections
- when lifting the unit do not exert force on the plastic fittings
- lay the pump on its base or fixing plate during transport
- if the road is particularly rough, protect the pump by means of adequate shock absorbing supports
- bumps and shocks may damage important working parts vital for safety and functionality of the machine

### 7.2 Installation

- Check that bolts and nuts are correctly screwed. (See chapter 8.3 “Assembly” for the right bolts torque setting.) Thermoplastics are dimensionally sensitive to sizeable temperature changes.
- Clean the plant before connecting the pump.
- Make sure that no foreign bodies are left in the pump. Remove safety caps on the hydraulic connections.
- Follow the instructions indicated in the following diagram:
  - 1) YES: gate valve (may also be near pump in the case of long piping)
  - 2) With positive head: tilt of piping towards pump
  - 3) YES: line strainer (3-5 mm mesh)
  - 4) NO: air pockets: the circuit must be short and straight
  - 5) YES: pipe fixing parts
  - 6) Fluid speed suction: 2.5 m/s
  - 7) YES: check valve (especially for long vertical or horizontal pipes; compulsory with parallel pumps)
  - 8) YES: adjusting gate valve on outlet
  - 9) Speed of delivered fluid: 3.5 m/s max.
  - 10) YES: attachment for gauge or safety pressure switch
  - 11) NO: elbow joints (and other parts) on the pump (discharge and suction lines)
  - 12) With negative suction lift: tilt of piping towards suction tank
  - 13) YES: check valve (with negative suction lift)
  - 14) YES: Strainer (3-5 mm mesh)
  - 15) Suction head varies according to flow in order to prevent windage (min. 0.5 m, max. 15% of pump head).
  - 16) Suction head, 3 m max.
  - 17) Immersion depth, 0.3 m min.
  - 18) YES: expansion joint (indispensable with long pipes or hot liquids) and/or anti-vibration facility during discharge and suction; anchored near to pump
  - 19) YES: pipe discharge (completely sealed), discharge valve shut during normal operations

- 20) YES: overcoming obstacles at lower depths  
 21) Fix the pump by the fixing holes provided: the supports must be level  
 22) YES: drainage channel around base

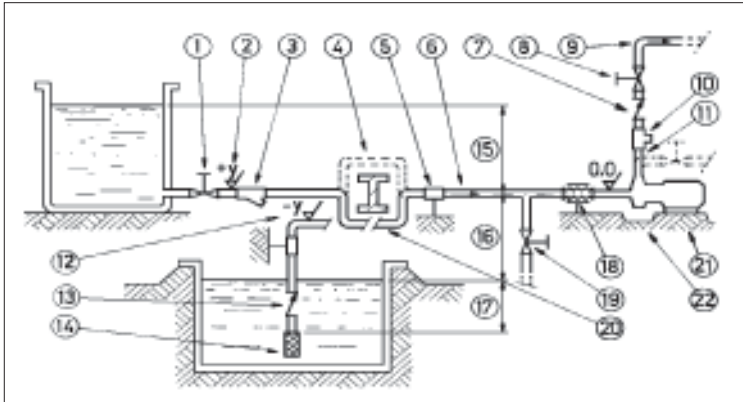

- Anchor the pump to an adequate base plate having a mass at least 5 times that of the pump.
- Do not use anti-vibration mounts to fix the pump.
- Anti-vibration joints are recommended on the pipe connections.
- Manually verify that all rotating parts are free to turn without abnormal friction by turning the motor cooling fan.
- Make sure that the power supply is compatible with the data shown on the pump motor identification plate.
- Connect the motor to the power supply via a magnetic/thermal control switch.
- Ensure that star-delta starting is implemented for motors whose power is more than 15 kW .
- Install emergency stop devices to switch off the pump in case of low liquid level (floating, magnetic, electronic, pressure- sensitive).
- Ambient temperature as a function of the physical-chemical characteristics of the liquid to be pumped and in any case not greater or lower than the interval indicated in the field of application.
- Other environmental conditions in accordance with the IP protection of the motor.
- Install a drainage pit to collect any liquid overflow from the base drainage channel due to normal maintenance work.
- Leave enough free space around the pump for a person to move.
- Leave free space above the pump for lifting operations.
- Highlight the presence of aggressive liquids with coloured tags following the local safety regulations.
- Do not install the pump (made in thermoplastic material) in close proximity to heating apparatus.
- Do not install the pump in areas subject to solid or liquid matter falling.
- Do not install the pump in an explosive atmosphere unless the motor and its coupling have been adequately pre-arranged.
- Do not install the pump in close proximity to workplaces or crowded places.
- Install extra protection guards for the pump or persons as the need arises.
- Install a spare equivalent pump in parallel.

---

### 7.3 Start-up

- Verify that the instructions outlined in the INSTALLATION have been followed.
- Verify the correct direction of rotation (clockwise from the motor side) supplying the motor with short impulses.
- Ensure that the NPSH available is greater than that required by the pump (in particular for hot liquids, liquids with high vapour pressure, very long suction pipes or negative suction lift).
- Close the drain valve (pos. 19); totally flood the suction pipe and the pump.
- Start the pump with the suction valve completely open and the discharge valve partially closed.
- Slowly regulate the flow by opening or closing the discharge valve (never the suction valve). Make sure that the power absorbed by the motor does not exceed the rated one indicated on the motor identification plate.
- Do not operate the pump at the limit values of its performance curve: maximum head (discharge valve excessively closed) or maximum capacity (total absence of drops and geodetic head on the discharge side).
- Set the operating point to that for which the pump was requested.
- Ensure that there are no abnormal vibrations or noise due to inadequate mounting or cavitation.
- Avoid short and/or frequent starts by properly setting the control devices.
- Ensure that the temperature, pressure and liquid characteristics are as those specified at the time of order.
- **Warning!** At the start-up be sure that all the internal hydraulic parts are not in anti-clockwise rotation. The cooling fan of the motor must stand or rotate clockwise to prevent decoupling among magnetic driven parts of the pump. Add a non-return valve in the plant if the anti-clockwise rotation is due to the feed-back of the liquid in the discharge side.

### 7.4 Use

- Switch automatic control on.
- Do not activate valves whilst the pump is in operation.
- Risks of dangerous water hammer effects in case of sudden or improper valve actuation (only trained personnel should operate valves).
- Completely empty and wash the pump before using a different liquid.
- Isolate or empty the pump if the crystallization temperature of the liquid is the same or lower than the ambient temperature.
- Stop the pump if the liquid temperature exceeds the maximum allowed temperature indicated in the general notes; if the increase is of approximately 20%, check internal parts.
- Close the valves in case of leaks.
- Wash with water only if compatible from the chemical point of view. As alternative use an appropriate solvent that will not generate dangerous exothermal reactions.
- Contact the liquid supplier for information on the appropriate fire precautions.
- Empty the pump in case of long periods of inactivity (in particular with liquids which would easily crystallize).

### 7.5 Shutdown

- Disconnect the motor
- Before starting maintenance, turn off the suction and discharge valves

---

## 8. Maintenance

All maintenance operations must be performed under the supervision of qualified personnel.

- Make periodic inspections (2 to 6 months depending on the type of liquid and the operating conditions) on the rotating parts of the pump; clean or replace as necessary.
- Make periodic inspections (3 to 5 months depending on the type of liquid and the operating conditions) on the functionality of the motor control system; efficiency must be guaranteed.
- Make periodic inspections (20 to 30 days depending on the type of liquid and the operating conditions) of the in-line and foot filters as well as of the bottom valve.
- The presence of liquid below the pump could be a clue to pump problems.
- Excessive current consumption could be an indication of impeller problems.
- Unusual vibrations could be due to unbalanced impeller (due to damage or presence of foreign material obstructing its blades).
- Reduced pump performance could be due to an obstruction of the impeller or damages to the motor.
- Motor damages could be due to abnormal friction within the pump.
- Damaged parts must be replaced with new original parts.
- The replacement of damaged parts must be carried out in a clean and dry area.

### 8.1 Disassembly

- All maintenance operations must be performed under the supervision of qualified personnel.
- Cut off the power supply from the motor and disconnect the electrical wiring; pull the wires out from the terminal box and isolate their extremities accordingly.
- Close the suction and discharge valves and open the drain valve.
- Use gloves, safety glasses and acid-proof overalls when disconnecting and washing the pump.
- Disconnect the piping and leave enough time for the residual liquid to exit the pump body and atmospheric air to fill the empty volume.
- Wash the pump before carrying out any maintenance work.
- Do not scatter the liquid in the environment.
- Before attempting to dismantle the pump ensure that its motor is disconnected and that it may not be started accidentally.
- Before the inspection, check that you have spare O-rings ready to hand for re-installing at the end of operations.
- **Warning!** Operations near the magnet attract the tools. Proceed with caution to avoid damage.

### 8.1.1 Dismantling of series TMR G2

- Tools required: size 10 socket spanner, cross cogging screw driver, punch  $\varnothing < 4$  mm. Bolts have right-hand thread.
- Unscrew the connections (Fig. 8.1.1 A, Pos. 1) as described in the spare-parts list and remove the hydraulic parts from the motor parts.
- Proceed separately to disassemble the hydraulic parts or the motor parts following the sequence described in the spare-parts list.
- **Warning!** The disassembly operations of parts magnetically connected involve great opposed forces. Keep the motor parts fixed on floor during the removal of the hydraulic parts.
- To facilitate the disassembly operations keep the pump in vertical position (suction on top) (Fig. 8.1.1 B).
- **Warning!** During the disassembly of the hydraulic parts do not bump the guide components.
- **Warning!** After the dismantling of the pump casing extract together the impeller and the central disc; avoid radial movements (Fig. 8.1.1 C).
- Disassemble the motor parts.  
Unscrew the 4 Phillips drive screws inside the drive magnet assembly (Pos. E, Fig. 8.1.1 D).
- **Warning!** During the use of screw driver inside the drive magnet assembly you must oppose the magnetic attraction.
- **Warning!** After unscrewing the 4 screws (Pos. E, Fig. 8.1.1 D) insert the punch  $\varnothing < 4$  mm in one of the two extraction holes (Pos. D, Fig. 8.1.1 D) to remove the collar (Pos. C, Fig. 8.1.1 E) from the back and to allow the removing of the drive magnet assembly, sockets and collar (Pos. A, Pos. B, Pos. C, Fig. 8.1.1 E) from the motor shaft.

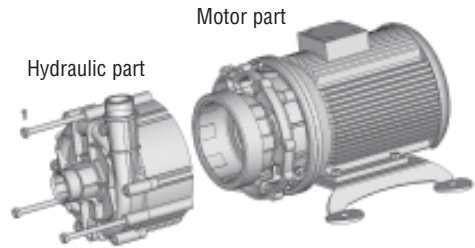


Fig. 8.1.1 A - First step of disassembling sequence

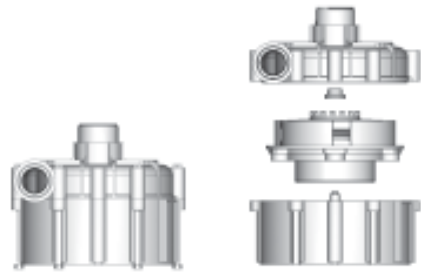


Fig. 8.1.1 B

Fig. 8.1.1 C



Fig. 8.1.1 D - Drive magnet disassembly legend

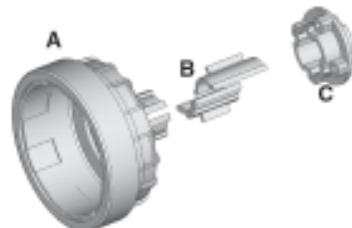


Fig. 8.1.1 E - Drive magnet assembly - sockets - collar scheme

### 8.1.2 Dismantling of series TMR G3

- Tools required: size 13, 17 and 19 socket spanner, cross cogging screw driver, punch  $\varnothing < 4$  mm. Bolts have right-hand thread.
- Unscrew the connections (Fig. 8.1.2 A, Pos. 1) as described in the spare-parts list and remove the hydraulic parts from the motor parts.

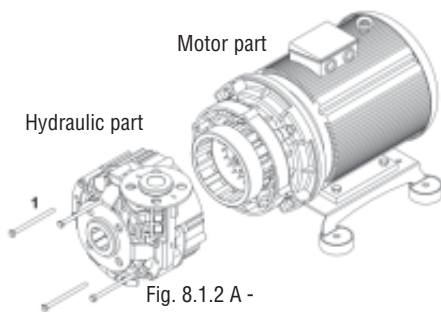


Fig. 8.1.2 A - First step of disassembling sequence

- Proceed separately to disassemble the hydraulic parts or the motor parts following the sequence described in the spare-parts list.
- **Warning!** The disassembly operations of parts magnetically connected involve great opposed forces. Keep the motor parts fixed on floor during the removal of the hydraulic parts.
- To facilitate the disassembly operations keep the pump in vertical position (suction on top) (Fig. 8.1.2 B).

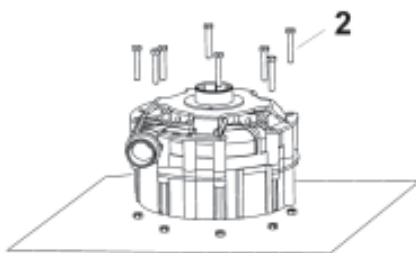


Fig. 8.1.2 B

- **Warning!** During the disassembly of the hydraulic parts do not bump the guide components.
- **Warning!** After the dismantling of the pump casing extract together the impeller and the central disc; avoid radial movements (Fig. 8.1.2 C).

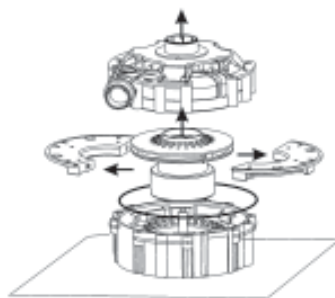


Fig. 8.1.2 C

- **Warning!** Before separating the impeller assembly (Fig. 8.1.2 D, Pos. 22) from magnetic core (Fig. 8.1.2 D, Pos. 5), unscrew the 4 plastic lock screws (Fig. 8.1.2 D, Pos. 23).

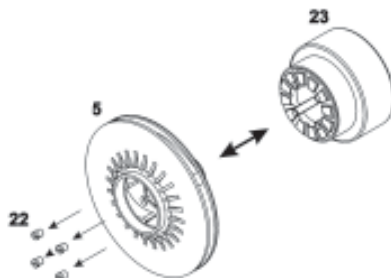


Fig. 8.1.2 D

### Armour Dismantling:

- **Warning!** The volute casing must be already separated from other hydraulic parts.
- For the flanged execution, first disassemble the inlet and outlet seeger (Fig. 8.1.2 E, Pos. 29, 30), second remove the flanged armour as described in Fig. 8.1.2 E.

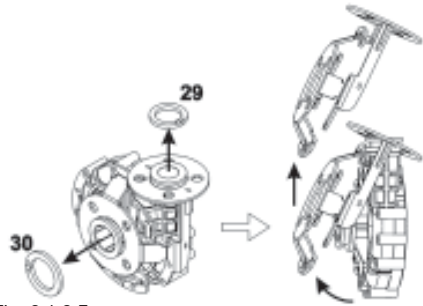


Fig. 8.1.2 E -  
Disassembly of the protection flange  
for the flanged execution

- For the threaded execution unscrew the lock nut and remove the armour (Fig. 8.1.2 F, Pos. 40).

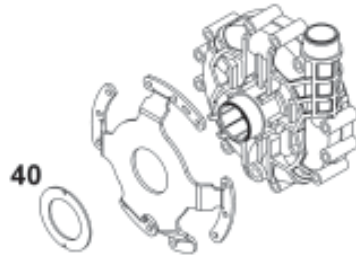


Fig. 8.1.2 F -  
Disassembly of the protection flange  
for the threaded execution

- Disassembly of the motor parts: unscrew the 4 screws inside the drive magnet assembly (Fig. 8.1.2 G, Pos. 10).
- **Warning!** During the use of screw driver inside the drive magnet assembly you must oppose the magnetic attraction.



Fig. 8.1.2 G -  
Disassembly of the  
drive magnetic  
assembly



- **Warning!** After unscrewing the 4 screws (Fig. 8.1.2 G, Pos. 10) insert the punch  $\varnothing < 4$  mm in one of the two extraction holes to remove the collar (Fig. 8.1.2. H, Pos. 19) from the back and to allow the removing of the drive magnet assembly, sockets and collar (Fig. 8.1.2. I) from the motor shaft.

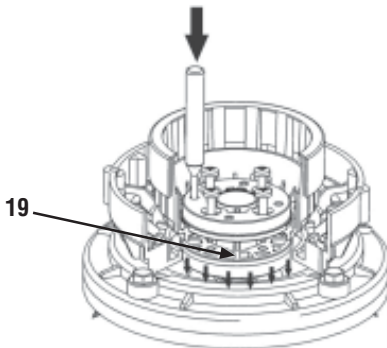


Fig. 8.1.2 H -  
Dismantling of the drive magnet assembly

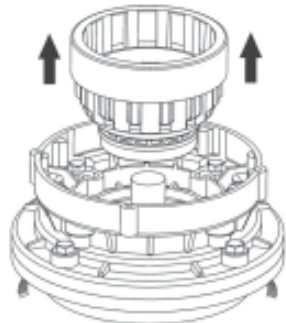


Fig. 8.1.2 I -  
Disassembly of the drive magnet assembly

## 8.2 Inspection

Check:

- the pump shaft for cracks and excessive wear
- guide bushing for excessive wear ( $\cong 5$  %)
- counterthrust bushing for cracks or excessive wear
- pump shaft clutch
- that the guide bushing cooling circuit is not blocked
- the impeller, volute and rear chamber for abrasion and corrosion
- that the pressure balancing holes on the impeller blades are not blocked
- for lumps and clusters created by the pumped liquid (especially at the bottom of the rear chamber)
- for infiltration of liquid into the chamber containing the inner magnets
- abrasions on the outside surface of the rear chamber due to scratching of the outer magnets

Replace broken, cracked or deformed parts.

Reopen all the blocked pipes and eliminate any chemical agglomeration.

Clean all the surfaces before re-assembly, especially the O-ring seats (risk of drip leaks).

### 8.3 Assembly



**Danger!**

Operation in hazardous location or pumping flammable liquids can cause explosion resulting in severe injury or death. Do not install damaged parts. To prevent sparks due to mechanical contact the rotating parts must be correctly assembled and checked for functional efficiency.

- Tools required: size 10-13 socket spanner, screw driver (Phillips drive type)  
Bolts have right-hand thread.

Bolt torque setting Nm (reduce by 25% on plastic parts)	<b>M4</b>	<b>M6</b>	<b>M8</b>	<b>M10</b>	<b>M12</b>
	<b>4</b>	<b>14</b>	<b>24</b>	<b>25</b>	<b>40</b>

- All these maintenance operations must be performed under the supervision of qualified personnel.
- Before the inspection, check that you have spare O-rings ready to hand for re-installing at the end of operations.
- Proceed separately to disassemble the hydraulic parts or the motor parts following the backward sequence described in the spare-parts list.
- **Warning!** Assemble the hydraulic parts to the motor parts only after the complete assembling of these two sub-assembly groups.
- Assembling the hydraulics and the motor parts, oppose the magnetical force keeping the hydraulic parts by the inlet and the outlet connectors.

#### 8.3.1 Assembly of series TMR G2

- **Warning!** Locate the strainer on the motor flange as shown in Fig. 8.3.1 A.



Fig. 8.3.1 A – Right location of the strainer on the motor flange

- The right location of the strainer allows the assembly of the hydraulic parts as shown in Fig. 8.3.1 B.

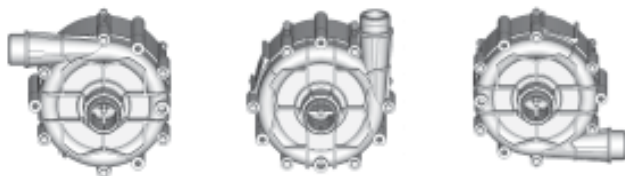


Fig. 8.3.1 B – Allowed position of the hydraulic part

- If necessary insert sockets (Fig. 8.3.1 C, Pos. B) in the back of the drive magnet assembly (Fig. 8.3.1 C, Pos. A).
- The relative position of the drive magnet assembly and sockets is shown in Fig. 8.3.1 C ( $\alpha$  and  $\beta$  planes).
- Insert the collar (Pos. C) on the back of the drive magnet assembly keeping the side pump collar surface as far as possible from the plane  $\epsilon$ .
- Verify that the collar surface with visible brass inserts is motor side.
- Remove possible traces of grease from the motor shaft.
- Insert the assembled group (drive magnet assembly, sockets, collar) on the motor shaft.
- After assembling on motor shaft verify the right position of sockets Pos.B in drive magnet assembly Pos.A (referring to planes  $\alpha$  and  $\beta$  shown in Fig. 8.3.1 C).
- Screw the 4 Phillips drive screws repeating the sequence E1, E2 ,E3 ,E4 and applying a torque  $\cong 6$  Nm (Fig. 8.3.1 D).
- At the end of the screwing operation the collar will be at about 3-4 mm from the  $\epsilon$  plane (Fig. 8.3.1 C).
- **Warning!** During the hydraulic parts assembling keep the parts in vertical position.
- Assemble central disc and impeller before insert them in the rear casing, (Pos.F in Fig. 8.3 E).
- **Warning!** There are magnetical attraction forces in action assembling the central disc and impeller: avoid bump opposing manual force.
- Avoid radial movements during assembling the sub-assembly central disc-impeller in the rear casing.
- The pumps of series TMR are provided with a bidirectional axially alignment system (patented system).
- **Warning!** Verify that the value of the dimension Q (Fig. 8.3.1 F) is 3 mm.

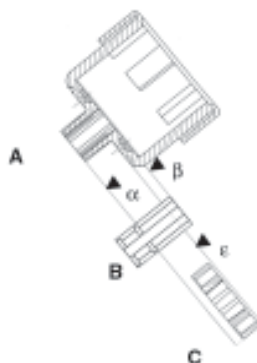


Fig. 8.3.1 C - Correct alignment of drive magnet assembly, sockets and collar



Fig. 8.3.1 D - Screw repeating the sequence E1 - E2 - E3 - E4

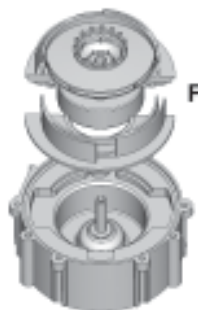


Fig. 8.3.1 E - Sub-assembly central disc - impeller scheme

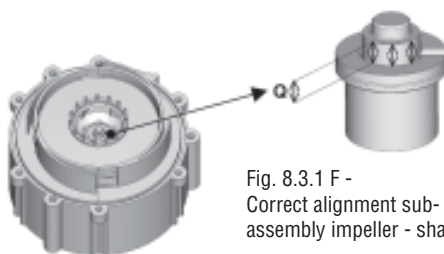


Fig. 8.3.1 F - Correct alignment sub-assembly impeller - shaft

### 8.3.2 Assembly of series TMR G3

- Insert the correct sockets couple (see appendix A), take care that the groove placed between the socket keys is fitted in the drive magnet assembly, this placement guarantees the correct assembling and the unfitting of the sockets (Fig. 8.3.2 A).

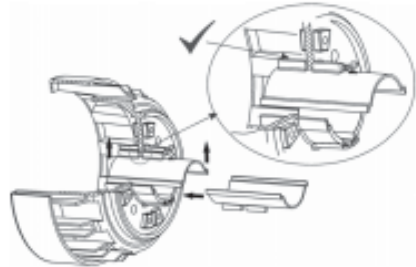


Fig. 8.3.2 A - Assembly of the sockets

- The correct placement of the drive magnet assembly is explained in appendix A.
- Insert the collars in the drive magnet assembly tang, see Fig. 8.3.2 B for the correct placement.
- **Warning!** Don't reverse the collars; in the collar Pos.19 the brass nuts are visible.
- Insert the 4 screws in the sites.
- **Warning!** Don't fasten completely the 4 screws before fitting the drive magnet assembly on the motor.
- Insert the assembly group (drive magnet assembly, sockets, collar) on the motor shaft.



Fig. 8.3.2 B - Assembly of the collars

- Check that during fitting of the assembly group the position between the sockets and the drive magnet assembly is unchanged (see appendix A), screw the 4 screws repeating the sequence E1, E2 ,E3 ,E4 applying a torque  $\cong 6$  Nm (Fig. 8.3.2 C).

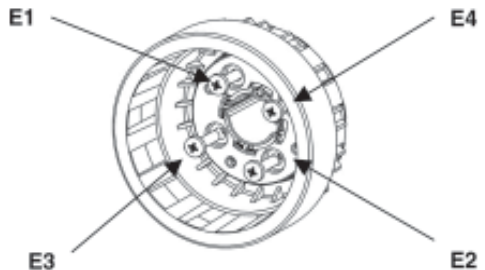


Fig. 8.3.2 C - Fastening of the screws

## Impeller Assembling

- Fit the bushing Pos.7 in the impeller (Fig. 8.3.2 D).
- Before the fitting take care to align the bushing radial grooves with the key placed in the impeller.
- **Warning!** Before the bushing fitting the temperature of the impeller must be 20 °C superior to the temperature of the bushing. Otherwise the impeller will be damaged.
- During the fitting operation do not hit the bushing.

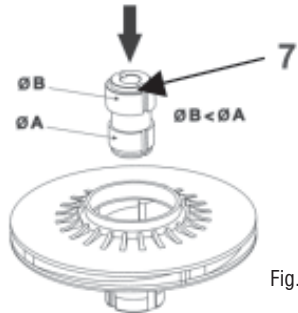


Fig. 8.3.2 D

- Fit the impeller assembly in the magnetical core.
- Before fitting align the 4 radial grooves placed on the impeller (Fig. 8.3.2 E, Pos. 5) with the 4 keys placed in the internal diameter of the magnetical core.
- After checking that the fitting is correctly done, insert the 4 plastic screws Pos. 22.

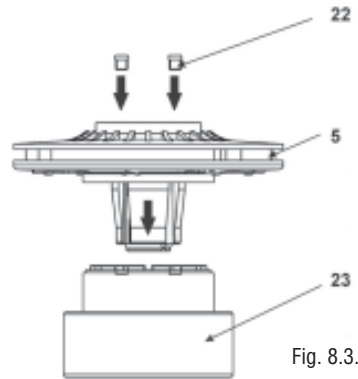


Fig. 8.3.2 E

- Assemble the impeller with the semi-discs (Fig. 8.3.2 F).
- Insert the group (impeller + semi-discs) in the rear casing, during this operation take care of the guide system components, these components are made of materials which fear hits.
- Insert the o-ring in the site and fit the 8 screws (see spare-parts list Pos. 2).
- Assembling the hydraulics and the motor parts, oppose the magnetical force keeping the hydraulic parts by the inlet and the outlet connectors.

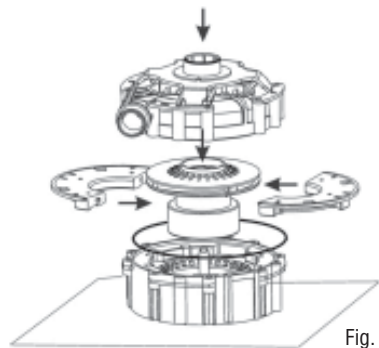


Fig. 8.3.2 F

## 9. Repair

When returning the device to the supplier it is compulsory to attach the decontamination certificate duly filled out and signed by the operator (see service area [www.lutz-pumpen.de](http://www.lutz-pumpen.de)).

---

## 10. Operating faults and possible causes

### **Pump does not deliver:**

1. rotates in wrong direction
2. suction pipe is excessively long and tortuous
3. insufficient geodetic pump head or excessive suction geodetic lift
4. air infiltration into the suction pipe or branches
5. pump or suction pipe not completely covered by liquid
6. impeller channels blocked by impurities
7. check valve on discharge pipe jammed
8. geodetic system height is greater than maximum potential pump head
9. impeller jammed by considerable layer of crystals or by melting of materials for dry rotation
10. bottom valve blocked by mud or other debris
11. bottom valve insufficiently immersed
12. bottom valve faulty, thereby causing suction valve to empty when pump stops
13. magnets release a much greater specific weight and flow rate of liquid than planned
14. magnets release during start-up while the impeller is moving anti-clockwise (feed-back of the liquid in the discharge side)

### **Pump discharge rate or pressure insufficient:**

see 01, 02, 03, 04, 05, 06, 10, 11, 12, 13

15. system's resistance head is greater than expected
16. suction pipe, closing valve and other items have an insufficient nominal diameter
17. small geodetic pump suction head
18. damaged or worn impeller
19. liquid viscosity greater than expected
20. excessive quantities of air or gas in liquid
21. elbow joints, check valves or other items on the outlet port
22. liquid (especially if hot) with tendency to change into gaseous state

### **Pump absorbs too much power:**

see 19

23. pump operates at greater capacity than expected
24. specific weight of liquid is greater than expected
25. impurities inside pump create abnormal wear
26. electric motor supply voltage is not rated voltage

### **Pump vibrates and is noisy:**

see 25

27. operates at full capacity (no head)
28. pump or pipes inadequately fixed
29. eccentric impeller operation because of worn bushes

### **Pump's internal parts wear out too quickly:**

see 25

30. liquid excessively abrasive
31. recurring cavitation problems (see 02, 15, 19, 17)
32. high tendency of liquid to crystallise or polymerise when pump is not operating
33. pump made of materials that are unsuitable for pumped liquid
34. operation with capacity too reduced

## 11. Technical data

### 11.1 Series TMR G2

<b>TMR</b>	<b>50 Hz</b>	<b>06.10</b>						<b>10.10</b>						<b>10.15</b>							
	<b>60 Hz</b>	<b>07.11</b>						<b>07.14</b>						<b>11.15</b>							
∅ Inlet	BSP - NPT	1 1/2"						1 1/2"						1 1/2"							
∅ Outlet	BSP - NPT	1 1/4"						1 1/4"						1 1/4"							
Flange ISO-ANSI-JIS	DNA*	40 - 1 1/2"						40 - 1 1/2"						40 - 1 1/2"							
	DNM *	32 - 1 1/4"						32 - 1 1/4"						32 - 1 1/4"							
Pump	Model	<b>06.10</b>						<b>10.10</b>						<b>10.15</b>							
	Execution	<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>			
		WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF		
Power (IEC) 50 Hz	kW	0.55		0.75		1.1		0.75		1.1		1.5		1.1		1.5		2.2			
Frame	IEC	71		80A		80B		80A		80B		90S		80B		90S		90L			
Weight of pump	without motor	kg	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	
		Lb	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	
	IEC	3-pole	kg	10	11	11	12	13	14	11	12	13	14	16	17	13	14	16	17	20	21
		E-exd	kg	18	19	23	24	23	24	23	24	23	24	33	34	23	24	33	34	34	35
1-pole	kg	12	13	14	15	17	18	14	15	17	18	20	21	17	18	20	21	27	28		
Noise	dB	65						70						70							
Max. head	m	11						14.5						18							
Max. capacity	m³/h	17						19						25							
Max. NPSH required	m wc																				
Pump	Model	<b>07.11</b>						<b>07.14</b>						<b>11.15</b>							
	Execution	<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>			
		WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF		
Power (IEC) 60 Hz	kW	0.75		1.1		1.5		1.1		1.5		2.2		1.5		2.2		3			
Frame	IEC	80A		80B		90S		80B		90S		90L		90S		90L		100L			
Power (NEMA) 60 Hz	HP	1		1 1/2		2		1 1/2		2		3		2		3		5			
Frame	NEMA	56		143		145		143		145		182		145		182		184			
Weight of pump	without motor	kg	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	
		Lb	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	
	IEC	3-pole	kg	11	12	13	14	16	17	13	14	16	17	20	21	16	17	20	21	25	26
		E-exd	kg	23	24	23	24	33	34	23	24	33	34	34	35	33	34	34	35	44	45
	1-pole	kg	14	15	17	18	20	21	17	18	20	21	27	28	20	21	27	28	-	-	
	NEMA	3-pole	Lb	33	35	35	38	48	50	44	46	48	50	86	88	48	50	86	88	91	94
E-exd		Lb	33	35	35	38	48	50	44	46	48	50	86	88	48	50	86	88	91	94	
1-pole		Lb	37	39	42	44	73	76	66	69	73	76	106	109	73	76	106	109	-	-	
Noise	dB	70						70						70							
Max. head	m	15.5						16.5						22							
Max. capacity	m³/h	15						19.5						24							
Max. NPSH required	m wc																				
Phase	N.	Three-phase (all versions) - AC-current (< 3 kW)																			
Standard voltage IEC	V	400 ± 5% 50 Hz																			
Standard voltage NEMA	V	460 ± 5% 60 Hz																			
Protection level	IP	55																			
Loads (ports section)	kg	max. single strength value F(x;y;z) = 2.5																			
Dynamic loads (base)	kg	6.5																			

## Series TMR G2

<b>TMR</b>	<b>50 Hz</b>	<b>16.15</b>						<b>16.20</b>						<b>02.30</b>									
	<b>60 Hz</b>	<b>11.23</b>						<b>17.25</b>						<b>03.35</b>									
∅ Inlet	BSP - NPT	1 1/2"						1 1/2"						1 1/2"									
∅ Outlet	BSP - NPT	1 1/4"						1 1/4"						1 1/4"									
Flange ISO-ANSI-JIS	DNA*	40 - 1 1/2"						40 - 1 1/2"						40 - 1 1/2"									
	DNM *	32 - 1 1/4"						32 - 1 1/4"						32 - 1 1/4"									
Pump	Model	<b>16.15</b>						<b>16.20</b>						<b>02.30</b>									
	Execution	<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>					
		WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF				
Power (IEC) 50 Hz	kW	1.5		2.2		3		2.2		3		-		2.2		3		-					
Frame	IEC	90S		90L		100L		90L		100L		-		90L		100L		-					
Weight of pump	without motor	kg	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4			
		IEC	3-pole		kg		16	17	20	21	25	26	20	21	25	26	34	35	20	21	25	26	34
	E-exd	kg		33	34	34	35	44	45	34	35	44	45	54	55	34	35	44	45	54	55		
	1-pole	kg		20	21	27	28	-	-	27	28	-	-	-	-	27	28	-	-	-	-		
Noise	dB	70						70						70									
Max. head	m	23.5						26.5						31									
Max. capacity	m³/h	26						30						8									
Max. NPSH required	m wc																						
Pump	Model	<b>11.23</b>						<b>17.25</b>						<b>03.35</b>									
	Execution	<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>		<b>N</b>		<b>P</b>		<b>S</b>					
		WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF	WR	GF				
Power (IEC) 60 Hz	kW	2.2		3		-		4		-		-		4		-		-					
Frame	IEC	90L		100L		-		112		-		-		112		-		-					
Power (NEMA) 60 Hz	HP	3		5		-		5		-		-		5		-		-					
Frame	NEMA	182		184		-		184		-		-		184		-		-					
Weight of pump	without motor	kg	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4			
		Lb	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9	6.7	8.9			
	IEC	3-pole		kg		20	21	25	26	-	-	34	35	-	-	34	35	-	-	-	-		
		E-exd	kg		34	35	44	45	-	-	54	55	-	-	54	55	-	-	-	-			
		1-pole	kg		27	28	-	-	-	-	-	-	-	-	-	-	-	-	-	-			
	NEMA	3-pole		Lb		86	88	91	94	-	-	91	94	-	-	91	94	-	-	-	-		
		E-exd	Lb		86	88	91	94	-	-	91	94	-	-	91	94	-	-	-	-			
1-pole		Lb		109	109	-	-	-	-	-	-	-	-	-	-	-	-	-	-				
Noise	dB	70						74						74									
Max. head	m	28						36						35									
Max. capacity	m³/h	27						30						10									
Max. NPSH required	m wc																						
Phase	N.	Three-phase (all versions) - AC-current (< 3 kW)																					
Standard voltage IEC	V	400 ± 5% 50 Hz																					
Standard voltage NEMA	V	460 ± 5% 60 Hz																					
Protection level	IP	55																					
Loads (ports section)	kg	max. single strength value F(x;y;z) = 2.5																					
Dynamic loads (base)	kg	11																					



## 11.2 Series TMR G3

TMR	50 Hz	20.15			20.20			20.27			20.36		
	60 Hz	21.18			21.25			21.28			21.43		
∅ Inlet	BSP - NPT	2"			2"			2"			2"		
∅ Outlet	BSP - NPT	1 1/2"			1 1/2"			1 1/2"			1 1/2"		
Flange ISO-ANSI-JIS	DNA (mm)	50			50			50			50		
	DNM (mm)	40			40			40			40		
Flange ISO-ANSI-JIS	DNA (Inch)	2"			2"			2"			2"		
	DNM (Inch)	1 1/2"			1 1/2"			1 1/2"			1 1/2"		
Pump	Model	20.15			20.20			20.27			20.36		
	Execution	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>
Power (IEC) 50 Hz	kW	2.2	3	4	3	4	5.5	4	5.5	7.5	5.5	7.5	–
Frame Motor	IEC	90L	100L	112M	100L	112M	132SA	112M	132SA	132SB	132SA	132SB	–
Noise	dB	70	70	75	70	75	80	75	80	80	80	80	
Pump	Model	21.18			21.25			21.28			21.43		
	Execution	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>
Power (IEC) 60 Hz	kW	3	4	5.5	4	5.5	7.5	5.5	7.5	–	7.5	–	–
Frame Motor	IEC	100L	112M	132SA	112M	132SA	132SB	132SA	132SB	–	132SB	–	–
Power (NEMA) 60Hz	HP	5	5	7.5	5	7.5	10	7.5	10	–	10	–	–
Frame Motor	NEMA	184T	184T	213T	184T	213T	215T	213T	215T	–	215T	–	–
Noise	dB	70	75	80	75	80	80	80	80	–	80	–	
Phase	N.	Three-phase											
Standard voltage IEC	V	400 ± 5% 50 Hz											
Standard voltage NEMA	V	460 ± 5% 60 Hz											
Protection level	IP	55											
Loads (protection flange - thread)	kg	max. single strength value $F(x,y;z) = 2.5$											
Loads (protection flange - flange)	kg	max. single strength value $F(x,y;z) = 3.5$											

## Series TMR G3


<b>TMR</b>	<b>50 Hz</b>	<b>30.15</b>			<b>30.25</b>			<b>36.30</b>			<b>04.45</b>		
	<b>60 Hz</b>	<b>31.22</b>			<b>31.30</b>						<b>05.55</b>		
∅ Inlet	BSP - NPT	2"			2"			2"			2"		
∅ Outlet	BSP - NPT	1 1/2"			1 1/2"			1 1/2"			1 1/2"		
Flange ISO-ANSI-JIS	DNA (mm)	50			50			50			50		
	DNM (mm)	40			40			40			40		
Flange ISO-ANSI-JIS	DNA (Inch)	2"			2"			2"			2"		
	DNM (Inch)	1 1/2"			1 1/2"			1 1/2"			1 1/2"		
Pump	Model	<b>30.15</b>			<b>30.25</b>			<b>36.30</b>			<b>04.45</b>		
	Execution	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>
Power (IEC) 50 Hz	KW	4	5.5	7.5	5.5	7.5	–	7.5	–	–	5.5	7.5	–
Frame Motor	IEC	112M	132SA	132SB	132SA	132SB	–	132SB	–	–	112M	132SA	–
Noise	dB	75	80	80	80	80	–	80	–	–	75	80	–
Pump	Model	<b>31.22</b>			<b>31.30</b>						<b>05.55</b>		
	Execution	<b>N</b>	<b>P</b>	<b>S</b>	<b>N</b>	<b>P</b>	<b>S</b>				<b>N</b>	<b>P</b>	<b>S</b>
Power (IEC) 60 Hz	KW	5.5	7.5	–	7.5	–	–				7.5	–	–
Frame Motor	IEC	132SA	132SB	–	132SB	–	–				132SB	–	–
Power (NEMA) 60Hz	HP	7.5	10	–	10	–	–				10	–	–
Frame Motor	NEMA	213T	215T	–	215T	–	–				215T	–	–
Noise	dB	80	80	–	80	–	–				80	–	–
Phase	N.	Three-phase											
Standard voltage IEC	V	400 ± 5% 50 Hz											
Standard voltage NEMA	V	460 ± 5% 60 Hz											
Protection level	IP	55											
Loads (protection flange - thread)	kg	max. single strength value F (x,y,z) = 2.5											
Loads (protection flange - flange)	kg	max. single strength value F (x,y,z) = 3.5											

## 12. Dimensions

### 12.1 Series TMR G2


#### IEC-Motors 50 Hz

TMR G2	06.10			10.10			10.15			16.15			16.20		02.30		
IEC-Baugröße / IEC-frame	71	80A	80B	80A	80B	90S	80B	90S	90L	90S	90L	100	90L	100	90L	100	
De M (BSP/NPT)	1 1/4"			1 1/4"			1 1/4"			1 1/4"			1 1/4"		1 1/4"		
De A (BSP/NPT)	1 1/2"			1 1/2"			1 1/2"			1 1/2"			1 1/2"		1 1/2"		
DNM	32			32			32			32			32		32		
DNA	40			40			40			40			40		40		
a1	67			67			67			67			67		67		
L	356	385		385	405		385	405	430	405	430	478	430	478	430		
Q	75			75			75			75			75		75		
h1	71	80		80	90		80	90		90	100		90	100	90		
h2	130			130			130			130			130		130		
r	194	199		199	205		199	205		205	227		205	227	205		
r1	149			149			149			149			164	149	164	149	164
rb	161			161			161			161			176	161	176	161	176
m1	90	100		100	100		100	125		100	125	140	125	140	125		
n1	112	125		125	140		125	140		140	160		140	160	140		
s1	7	8		8			8			8	10		8	10	8		
g	106	110		110	142		110	142		142	155		142	155	142		
L3	185			185			185			185			205	185	205	185	205
B2	248			248			248			248			305	248	305	248	305
S2	14			14			14			14			14		14		
L1	245			245			245			245			265	245	265	245	265
B3	308			308			308			308			365	308	365	308	365
h3	40			40			40			40			40		40		
KM (ISO)	100			100			100			100			100		100		
KA (ISO)	110			110			110			110			110		110		
KM (ANSI)	89			89			89			89			89		89		
KA (ANSI)	98			98			98			98			98		98		
d x z (ISO)	18 x 4			18 x 4			18 x 4			18 x 4			18 x 4		18 x 4		
d x z (ANSI)	16 x 4			16 x 4			16 x 4			16 x 4			16 x 4		16 x 4		

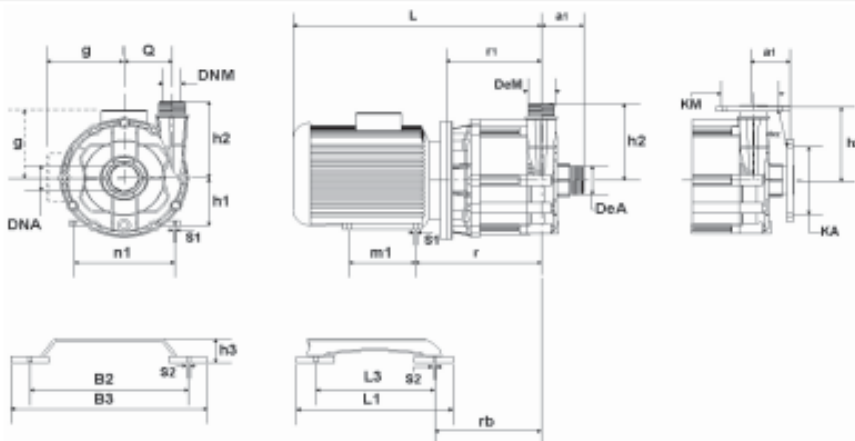

Series TMR G2  
IEC-Motors 60 Hz


TMR G2	07.11			07.14			11.15			11.23		17.25	03.35
IEC-Baugröße / IEC-frame	80A	80B	90S	80B	90S	90L	90S	90L	100	90L	100	112	112
De M (BSP/NPT)	1 1/4"			1 1/4"			1 1/4"			1 1/4"		1 1/4"	1 1/4"
De A (BSP/NPT)	1 1/2"			1 1/2"			1 1/2"			1 1/2"		1 1/2"	1 1/2"
DNM	32			32			32			32		32	32
DNA	40			40			40			40		40	40
a1	67			67			67			67		67	67
L	385	405	385	405	430	405	430	478	430	478	487	487	
Q	75			75			75			75		75	75
h1	80	90	80	90			90	100		90	100	112	112
h2	130			130			130			130		130	130
r	199	205	199	205			205	227	205	227	234	234	
r1	149			149			149	164	149	164	164	164	
rb	161			161			161	176	161	176	176	176	
m1	100			100	125	100	125	140	125	140	140	140	
n1	125	140	125	140			140	160	140	160	190	190	
s1	8			8			8	10	8	10	10	10	
g	110	142	110	142			142	155	142	155	168	168	
L3	185			185			185	205	185	205	205	205	
B2	248			248			248	305	248	305	305	305	
S2	14			14			14			14		14	14
L1	245			245			245	265	245	265	265	265	
B3	308			308			308	365	308	365	365	365	
h3	40			40			40			40		40	40
KM (ISO)	100			100			100			100		100	100
KA (ISO)	110			110			110			110		110	110
KM (ANSI)	89			89			89			89		89	89
KA (ANSI)	98			98			98			98		98	98
d x z (ISO)	18 x 4			18 x 4			18 x 4			18 x 4		18 x 4	18 x 4
d x z (ANSI)	16 x 4			16 x 4			16 x 4			16 x 4		16 x 4	16 x 4

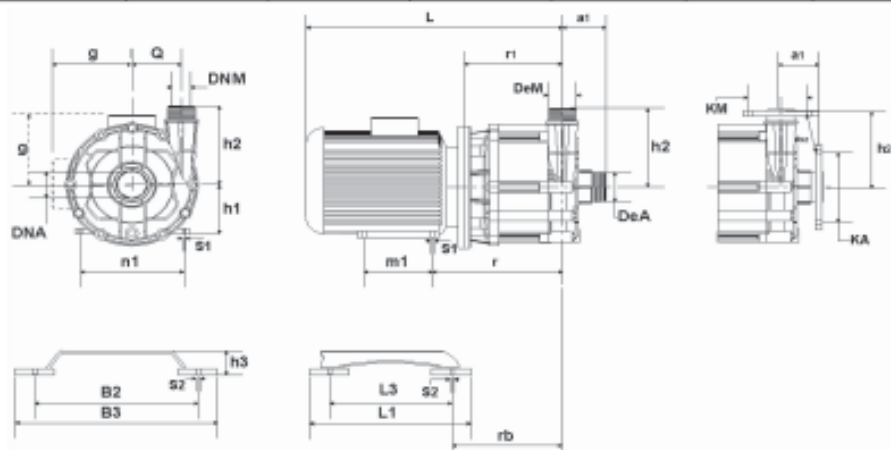

## Series TMR G2

### NEMA-Motors 60 Hz


TMR G2	07.11		07.14			11.15			11.23		17.25	03.35
NEMA-Baugröße / NEMA-frame	56	145	143	145	182	145	182	184	182	184	184	184
De M (BSP/NPT)	1 1/4"		1 1/4"			1 1/4"			1 1/4"		1 1/4"	1 1/4"
De A (BSP/NPT)	1 1/2"		1 1/2"			1 1/2"			1 1/2"		1 1/2"	1 1/2"
DNM	1 1/4		1 1/4			1 1/4			1 1/4		1 1/4	1 1/4
DNA	1 1/2		1 1/2			1 1/2			1 1/2		1 1/2	1 1/2
a1	2 21/32		2 21/32			2 21/32			2 21/32		2 21/32	2 21/32
L	14 15/16	16 15/16	15 15/16	16 15/16	18 1/2	16 15/16	18 1/2	19 1/2	18 1/2	19 1/2	19 1/2	19 1/2
Q	2 15/16		2 15/16			2 15/16			2 15/16		2 15/16	2 15/16
h1	3 1/2		3 1/2		4 1/2	3 1/2	4 1/2		4 1/2		4 1/2	4 1/2
h2	5 1/8		5 1/8			5 1/8			5 1/8		5 1/8	5 1/8
r	8 7/16	8 1/8	8 1/8	9 3/8	8 1/8	8 1/8	9 3/8	9 3/8	9 3/8	9 3/8	9 5/8	9 5/8
r1	5 7/8		5 7/8		6 5/8	5 7/8	6 5/8		6 5/8		6 5/8	6 5/8
rb	6 11/32		6 11/32		7 1/8	6 11/32	7 1/8		7 1/8		7 1/8	7 1/8
m1	3	5	4	5	4 1/2	5	4 1/2	5 1/2	4 1/2	5 1/2	5 1/2	5 1/2
n1	4 7/8	5 1/2	5 1/2		7 1/2	5 1/2	7 1/2		7 1/2		7 1/2	7 1/2
s1	3/8		3/8		13/32	3/8	13/32		13/32		13/32	13/32
g	5 7/16	5 29/32	6 29/32		7 1/32	5 29/32	7 1/32		7 1/32		7 1/32	7 1/32
L3	7 9/32		7 9/32		8 1/16	7 9/32	8 1/16		8 1/16		8 1/16	8 1/16
B2	9 3/4		9 3/4		12	9 3/4	12		12		12	12
S2	9/16		9/16			9/16			9/16		9/16	9/16
L1	9 21/32		9 21/32		10 3/16	9 21/32	10 3/16		10 3/16		10 3/16	10 3/16
B3	12 1/8		12 1/8		14 1/8	12 1/8	14 1/8		14 1/8		14 1/8	14 1/8
h3	1 9/16		1 9/16			1 9/16			1 9/16		1 9/16	1 9/16
KM (ISO)	3 15/16		3 15/16			3 15/16			3 15/16		3 15/16	3 15/16
KA (ISO)	4 11/32		4 11/32			4 11/32			4 11/32		4 11/32	4 11/32
KM (ANSI)	3 1/2		3 1/2			3 1/2			3 1/2		3 1/2	3 1/2
KA (ANSI)	3 7/8		3 7/8			3 7/8			3 7/8		3 7/8	3 7/8
d x z (ISO)	3/4 x 4		3/4 x 4			3/4 x 4			3/4 x 4		3/4 x 4	3/4 x 4
d x z (ANSI)	5/8 x 4		5/8 x 4			5/8 x 4			5/8 x 4		5/8 x 4	5/8 x 4

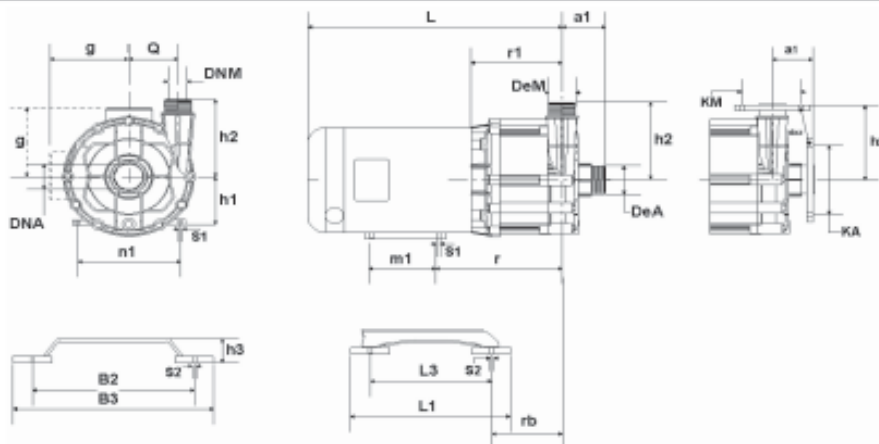

## 12.2 Series TMR G3


### IEC-Motors 50 Hz

TMR G3	20.15			20.20			20.27			20.36			30.15			30.25			36.30			04.45		
IEC-Bezugsgröße / IEC-Frame	90L	100L	112M	100L	112M	132SA	112M	132SA	132SB	132SA	132SB	112M	132SA	132SB	132SA	132SB	132SB	132SA	132SB	132SB	132SA	132SB		
De M (BSR/NPT)	1 1/2"			1 1/2"			1 1/2"			1 1/2"			1 1/2"			1 1/2"			1 1/2"			1 1/2"		
De A (BSR/NPT)	2"			2"			2"			2"			2"			2"			2"			2"		
DNM	40			40			40			40			40			40			40			40		
DNA	50			50			50			50			50			50			60			50		
a1	70			70			70			70			70			70			70			70		
L	489	512	521	512	521	578	521	578	578	578	521	578	578	521	578	578	578	578	578	578	578	578	578	
Q	96			96			96			96			96			96			96			96		
r1	90	100	112	100	112	132	112	132	132	132	112	132	132	112	132	132	132	132	132	132	132	132	132	
r2	180			180			180			180			180			180			180			180		
r	344	261	268	261	268	307	268	307	307	307	268	307	307	268	307	307	307	307	307	307	307	307	307	
r1	188	198		198		218	198	218	218	218	198	218	218	198	218	218	218	218	218	218	218	218	218	
rb	250	210	217	210	217	235	217	235	235	235	217	235	235	217	235	235	235	235	235	235	235	235	235	
mf1	125	140		140		140	140		140	140	140		140	140		140	140	140	140	140	140	140	140	
a1	140	160	190	160	190	216	190	216	216	216	190	216	216	190	216	216	216	216	216	216	216	216	216	
g1	8	10		10		10	10		10	10	10		10	10		10	10	10	10	10	10	10	10	
g	142	155	168	155	168	181	168	181	181	181	168	181	181	168	181	181	181	181	181	181	181	181	181	
L3	185	205		205		263	205	263	263	263	205	263	263	205	263	263	263	263	263	263	263	263	263	
B2	248	305		305		359	305	359	359	359	305	359	359	305	359	359	359	359	359	359	359	359	359	
B2	14			14			14			14			14			14			14			14		
L1	345	265		265		333	265	333	333	333	265	333	333	265	333	333	333	333	333	333	333	333	333	
B3	308	385		385		429	385	429	429	429	385	429	429	385	429	429	429	429	429	429	429	429	429	
h3	55			55			55			55			55			55			55			55		
KM (ISO)	110			110			110			110			110			110			110			110		
KA (ISO)	125			125			125			125			125			125			125			125		
KM (ANSI)	98			98			98			98			98			98			98			98		
KA (ANSI)	121			121			121			121			121			121			121			121		
h x z (ISO)	18 x 4			18 x 4			18 x 4			18 x 4			18 x 4			18 x 4			18 x 4			18 x 4		
h x z (ANSI)	16-19 x 4			16-19 x 4			16-19 x 4			16-19 x 4			16-19 x 4			16-19 x 4			16-19 x 4			16-19 x 4		

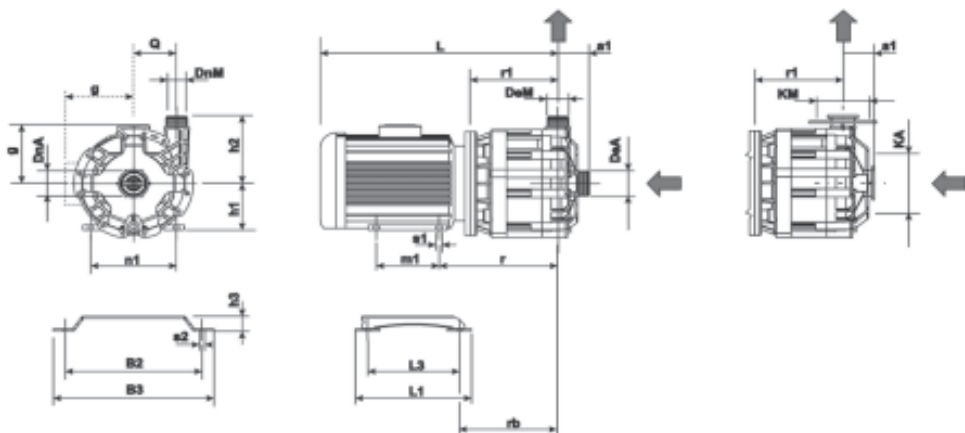

**Series TMR G3**  
**IEC-Motors 60 Hz**


TMR G3	21.18			21.25			21.28		21.43		31.22		31.30		05.55	
IEC-Baugröße / IEC-frame	100L	112M	132SA	112M	132SA	132SB	132SA	132SB	132SB	132SA	132SB	132SB	132SB	132SB	132SB	
De M (BSP/NPT)	1 1/2"			1 1/2"			1 1/2"		1 1/2"		1 1/2"		1 1/2"		1 1/2"	
De A (BSP/NPT)	2"			2"			2"		2"		2"		2"		2"	
DNM	40			40			40		40		40		40		40	
DNA	50			50			50		50		50		50		50	
a1	70			70			70		70		70		70		70	
L	512	521	578	521	578	578	578	578	578	578	578	578	578	578	578	
Q	96			96			96		96		96		96		96	
h1	100	112	132	112	132	132	132	132	132	132	132	132	132	132	132	
h2	160			160			160		160		160		160		160	
r	261	266	307	266	307	307	307	307	307	307	307	307	307	307	307	
r1	198		218	198	218	218	218	218	218	218	218	218	218	218	218	
rb	210	217	235	217	235	235	235	235	235	235	235	235	235	235	235	
m1	140			140			140		140		140		140		140	
n1	160	190	216	190	216	216	216	216	216	216	216	216	216	216	216	
e1	10			10			10		10		10		10		10	
g	155	168	181	168	181	181	181	181	181	181	181	181	181	181	181	
L3	205		263	205	263	263	263	263	263	263	263	263	263	263	263	
B2	305		359	305	359	359	359	359	359	359	359	359	359	359	359	
S2	14			14			14		14		14		14		14	
L1	265		333	265	333	333	333	333	333	333	333	333	333	333	333	
B3	365		429	365	429	429	429	429	429	429	429	429	429	429	429	
h3	55			55			55		55		55		55		55	
KM (ISO)	110			110			110		110		110		110		110	
KA (ISO)	125			125			125		125		125		125		125	
KM (ANSI)	98			98			98		98		98		98		98	
KA (ANSI)	121			121			121		121		121		121		121	
d x z (ISO)	16 x 4			16 x 4			16 x 4		16 x 4		16 x 4		16 x 4		16 x 4	
d x z (ANSI)	16-19 x 4			16-19 x 4			16-19 x 4		16-19 x 4		16-19 x 4		16-19 x 4		16-19 x 4	

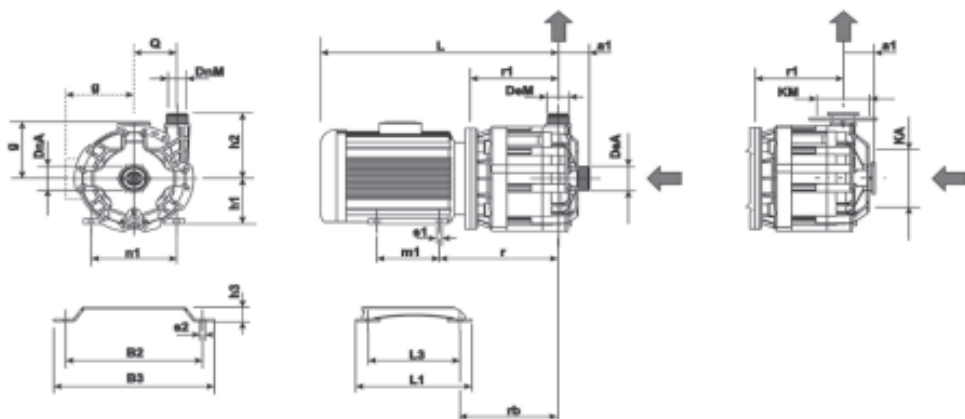







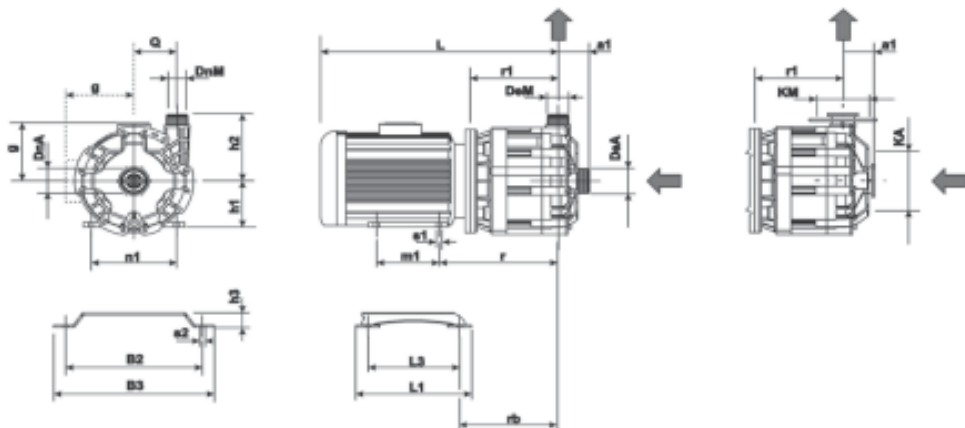












## Series TMR G3

### NEMA-Motors 60 Hz

TMR G3	21.18		21.25			21.28		21.43	31.22		31.30		05.55
NEMA-Baugröße / NEMA-frame	184T	213T	184T	213T	215T	213T	215T	215T	213T	215T	215T	215T	
De M (BSP/NPT)	1 1/2"		1 1/2"			1 1/2"		1 1/2"	1 1/2"		1 1/2"		
De A (BSP/NPT)	2"		2"			2"		2"	2"		2"		
DNM	1 1/2		1 1/2			1 1/2		1 1/2	1 1/2		1 1/2		
DNA	2		2			2		2	2		2		
a1	2 3/4		2 3/4			2 3/4		2 3/4	2 3/4		2 3/4		
L	20 13/16	23 1/8	20 13/16	23 1/8		23 1/8		23 1/8	23 1/8		23 1/8		
Q	3 3/4		3 3/4			3 3/4		3 3/4	3 3/4		3 3/4		
h1	4 1/8	5 1/4	4 1/4	5 1/4		5 1/4		5 1/4	5 1/4		5 1/4		
h2	6 1/4		6 1/4			6 1/4		6 1/4	6 1/4		6 1/4		
r	10 15/16	11 11/16	10 15/16	11 11/16		11 11/16		11 11/16	11 11/16		11 11/16		
r1	8 1/16	8 11/16	8 1/16	8 11/16		8 11/16		8 11/16	8 11/16		8 11/16		
rb	8 5/8		8 5/8			8 3/4		8 3/4	8 3/4		8 3/4		
m1	5 1/2		5 1/2			7	5 1/2	7	7	5 1/2	7	7	
n1	7 1/2	8 1/2	7 1/2	8 1/2		8 1/2		8 1/2	8 1/2		8 1/2		
s1	13/32		13/32			13/32		13/32	13/32		13/32		
g	7	8	7	8		8		8	8		8		
L3	8 1/16	10 3/8	8 1/16	10 3/8		10 3/8		10 3/8	10 3/8		10 3/8		
B2	12	14 1/8	12	14 1/8		14 1/8		14 1/8	14 1/8		14 1/8		
S2	9/16		9/16			9/16		9/16	9/16		9/16		
L1	10 3/16	13 1/8	10 3/16	13 1/8		13 1/8		13 1/8	13 1/8		13 1/8		
B3	14 1/8	16 7/8	14 1/8	16 7/8		16 7/8		16 7/8	16 7/8		16 7/8		
h3	2 5/32		2 5/32			2 5/32		2 5/32	2 5/32		2 5/32		
KM (ISO)	4 11/32		4 11/32			4 11/32		4 11/32	4 11/32		4 11/32		
KA (ISO)	4 15/16		4 15/16			4 15/16		4 15/16	4 15/16		4 15/16		
KM (ANSI)	3 7/8		3 7/8			3 7/8		3 7/8	3 7/8		3 7/8		
KA (ANSI)	4 3/4		4 3/4			4 3/4		4 3/4	4 3/4		4 3/4		
d x z (ISO)	3/4 x 4		3/4 x 4			3/4 x 4		3/4 x 4	3/4 x 4		3/4 x 4		
d x z (ANSI)	5/8-3/4 x 4		5/8-3/4 x 4			5/8-3/4 x 4		5/8-3/4 x 4	5/8-3/4 x 4		5/8-3/4 x 4		





Appendix A		Connection kit for IEC and NEMA motors		
Frame	Bracket coupling	Motor flange	Socket	Drive magnet assembly positioning
IEC 90 Kw 2.2 - 2p		Not present	  marked: 2550.7	
IEC 100-112 Kw 3 - 4 - 2p			  marked: 2551.7	
IEC 132 Kw 5.5 - 7.5 - 2p			  marked: 2552.7	
NEMA 184 Hp 5 - 2p			  marked: 2553.7	
NEMA 213 - 215 Hp 7.5 - 10 - 2p				



## Declaration of Conformity

We herewith declare that the design and construction of the following machine in the versions marketed by us fully comply with the relevant basic safety and health requirements specified by the EC Directives listed.

This declaration ceases to be valid if the machine is modified in any way without prior consultation with us.

Type of device:      Horizontal centrifugal pump with magnetic coupling

Series:                    **TMR G2, TMR G3**

EC Directives:	Execution:	WR	GF	GX
	EC-Directive 98/37/EC, annex I, section 1 without 1.2., such machine do not include commands or start/stop controls	●	●	●
	EC-Directive on low voltage installations 73/23/EEC	●	●	●
	EMV-Directive 89/336/EEC	●	●	●
	Atex-Directive 94/9/EEC			●

Registered number: LCIE 0081, 33 av du Gèneral Leclerc, 92266 Fontenay-aux-Roses cedex (France)  
 Entry No.: ATEX/ITA/05/030  
 Document No.: N01 rev. 1  
 Identification: II 2G T4

Applicable harmonized standards, in particular:

- |          |          |          |            |
|----------|----------|----------|------------|
| ISO 2858 | ISO 3746 | EN 953   | EN 22858   |
| ISO 2954 | ISO 9905 | EN 1050  | EN 23661   |
| ISO 3661 | EN 809   | EN 12162 | EN 13463-1 |

Wertheim, 02.11.2005

  
 Jürgen Lutz, Managing Director



## Lutz-Jesco GmbH

Am Bostelberge 19  
30900 Wedemark  
Germany

Phone: +49 5130 5802-0  
Fax: +49 5130 5802-68  
E-Mail: [info@lutz-jesco.de](mailto:info@lutz-jesco.de)  
Internet: [www.lutz-jesco.de](http://www.lutz-jesco.de)

24h-Hotline:  
+49 5130 580 280

### Austria

Lutz-Jesco GmbH

Aredstraße 29/212  
2544 Leobersdorf  
Austria

Phone: +43 2256 62180  
Fax: +43 2256 6218062  
E-Mail: [info@lutz-jesco.at](mailto:info@lutz-jesco.at)  
Internet: [www.lutz-jesco.at](http://www.lutz-jesco.at)

### USA

Lutz-JESCO America Corp.

55 Bermar Park  
Rochester, NY 14624  
USA

Phone: +1 585 426-0990  
Fax: +1 585 426-4025  
E-Mail: [mail@jescoamerica.com](mailto:mail@jescoamerica.com)  
Internet: [www.jescoamerica.com](http://www.jescoamerica.com)

### Großbritannien

Lutz-Jesco (GB) Ltd.

Gateway Estate  
West Midlands Freeport  
Birmingham B26 3QD  
Great Britain

Phone: +44 121 782 2662  
Fax: +44 121 782 2680  
E-Mail: [info-gb@jesco.de](mailto:info-gb@jesco.de)  
Internet: [www.lutz-jesco.de](http://www.lutz-jesco.de)

### East Asia

Lutz-Jesco  
East Asia Sdn Bhd

Taman Perindustrian Jaya  
47200 Petaling Jaya  
Malaysia

Phone: +603 78454812  
Fax: +603 78458413  
E-Mail: [info@lutz-jescoasia.com](mailto:info@lutz-jescoasia.com)  
Internet: [www.lutz-jescoasia.com](http://www.lutz-jescoasia.com)

### Niederlande

Lutz-Jesco Nederland B.V.

Nijverheidstraat 14 C  
2984 AH Ridderkerk  
Netherlands

Phone: +31 180 499460  
Fax: +31 180 497516  
E-Mail: [info@lutz-jesco.nl](mailto:info@lutz-jesco.nl)  
Internet: [www.lutz-jesco.nl](http://www.lutz-jesco.nl)

### Middle East

Lutz-Jesco Middle East FZE

P.O. Box 9614  
SAIF-Free Zone Center  
Sharjah  
UAE

Phone: +971 6 5572205  
Fax: +971 6 5572230  
E-Mail: [info-me@jesco.de](mailto:info-me@jesco.de)  
Internet: [www.jescome.com](http://www.jescome.com)

### Ungarn

Lutz-Jesco Üzletág

Vasvári P. u. 9.  
9024 Győr  
Hungary

Phone: +36 96 523046  
Fax: +36 96 523047  
E-Mail: [info-hu@lutz-jesco.hu](mailto:info-hu@lutz-jesco.hu)  
Internet: [www.lutz-jesco.hu](http://www.lutz-jesco.hu)



Best.-Nr. BA-85030-02-V02  
Subject to technical changes  
© Lutz-Jesco GmbH 10.2007  
Printed in Germany